



ADJUSTABLE SELF CLOSING HINGES FOR PVC (8100- BPSS AND 8100-WPSS)

(for gates up to 6 feet high by 4 feet wide)

two hinges, 26 Tek screws, 2 tension pins, and 1 tensioning bar included

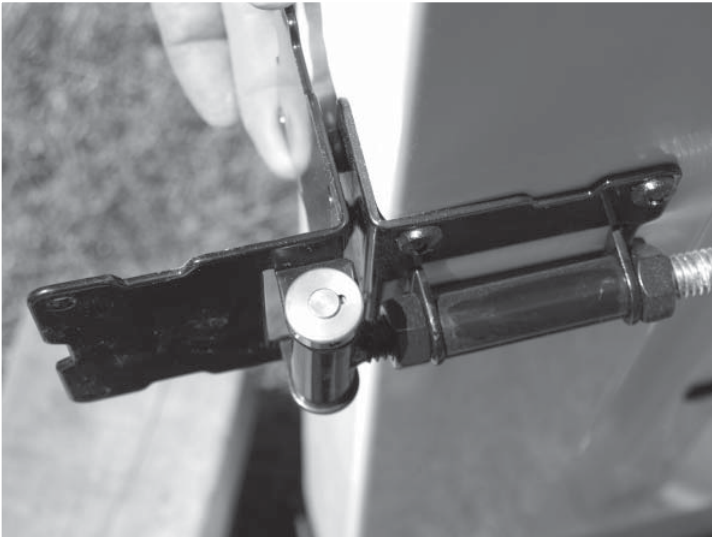


Position of hinge when attached to gate. If hinge is on left side of gate the tension wheel is on the top (if mounted on the right the tension wheel is on the bottom).

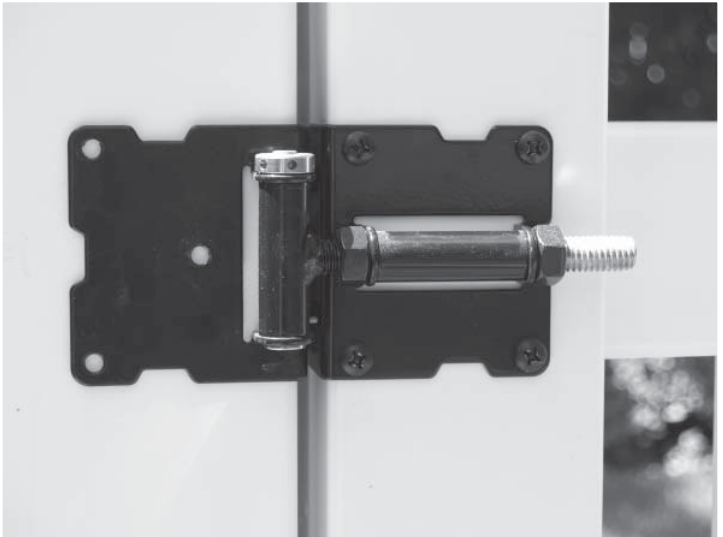

This picture shows the normal placement of the hinge (attached to gate) prior to fastening it to the post. The gap between the gate and post can be adjusted after hinges are fully attached.


TENSIONING THE SPRING FOR SELF CLOSING

(if you do not want the hinges to self close do no install the tension pins)

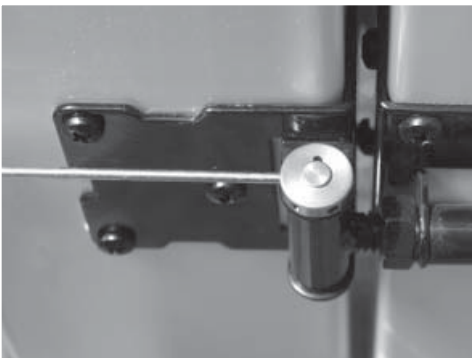


STEP 1

Insert the tension bar in hole at 9 o'clock position on tension wheel

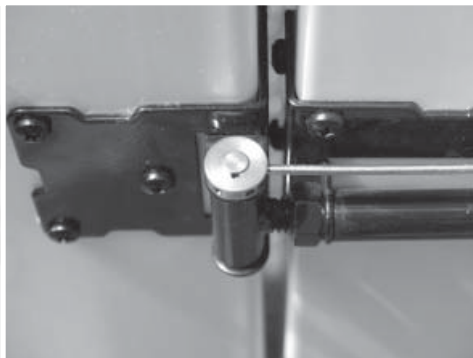


STEP 2

Rotate tension bar towards the gate to the 3 o'clock position.

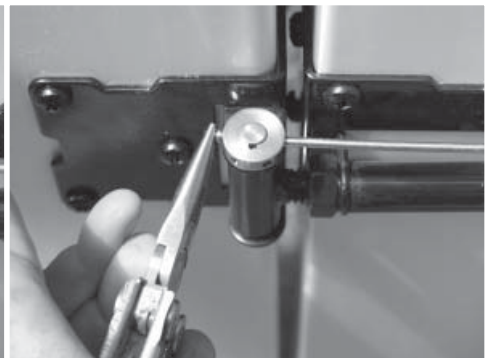


STEP 3

Install tension pin in hole at 9 o'clock position.

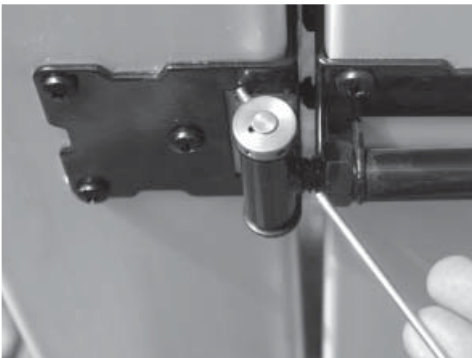


STEP 4

Rotate the bar back clockwise until the tension pin is against the hinge and remove bar.

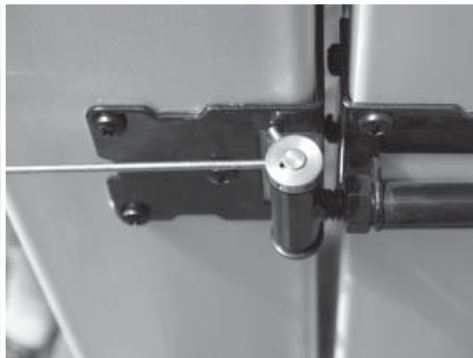

STEP 5

Steps 1 thru 4 may be repeated one more time only. Be sure to apply equal tension to both hinges.

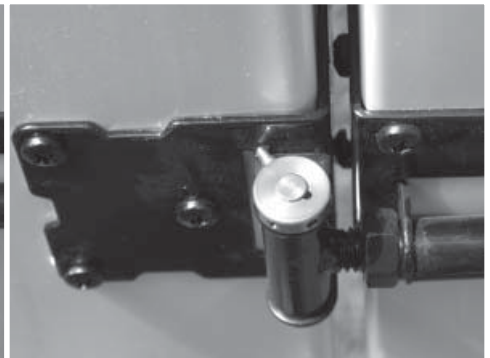

COMPLETED INSTALLATION

Picture above shows final configuration of tension hinge.

When installing the hinges on the right side of gate the tension wheel will be on the bottom of the hinge. TO APPLY TENSION ALWAYS ROTATE THE TENSIONING BAR TOWARDS THE GATE.

SNUG COTTAGE HARDWARE

snugcottagehardware.com