

DOUBLE CAPE COD RAIL GATE

Double Gate Configuration

(4' & 6' WIDE 46" HIGH GATES)

REAR EYE HINGES (Product Codes #8324)


GATE HUNG BETWEEN POSTS

Distance between gate and hinge post	A
Width of Left Gate	B
Distance between gates	C
Width of Right Gate	D
Distance between gate and hinge post	E
Total distance between posts	F


		Hardware Required		Rear Eye Hinge Advantages					
Hinge Sets	Galvanized Finish 1 of 8324-S122 & 1 of 8324-S182	Black Powder Coat over Galvanized Finish 1 of 8324-S12P & 1 of 8324-S18P		Opens 180 degrees Incredible amount of adjustment Easy operation & Very Strong Minimal distance between gate and post					
Fasteners included with straps	Two Sets Include: two 12" double strap (8324-122 or 8324-12SP) two 18" double strap (8324-182 or 8324-18SP) four mounting plate with 8" adjustable threaded pins(8256-342 or 8256-34P)								
Mounting Plate Fasteners*	4 of FP-8256-G	4 of FP-8256-B							
Cane Bolt (Vertical)**	1 or 2 of 5000-242	1 or 2 of 5000-24SP		Dimensions (feet and inches)					
	Central Latch Options			A	B	C	D	E	F
Throw Over Gate Loop	4200-032	4200-03SP		1"	4'	1"	6'	1"	10' 3"
Slide Bolt latch	5002-L122	5002-L12SP		1"	4'	1"	6'	1"	10' 3"
Lumber Required									
Posts	2 of 10' x 6" x 6" (usually dressed out at 5.5" x 5.5")								
Rails, Stiles (uprights) and Diagonals made from full 1" thick by 5.5" wide lumber (commonly stocked decking material or rough cut lumber)									
Rails	2 of 8' x 1" x 5.5" and 2 of 12" x 1" x 5.5"								
Stiles	6 of 8' x 1" x 5.5"								
Diagonals	4 of 8' x 1" x 5.5"								
Filler blocks for bottom hinge	1 of 12' x 1" x 5.5" and 2 of 8" x 1" x 5.5" (Parts E,F,G and H on Plan Layout)								
Fasteners Required for Gate Construction									
2 of FP-CapeCod- Fastener Pack for Cape Cod Gate Build (Each pack includes 50 of 1.75" wood screws, 18 of 3.5" HDG carriage bolts nuts and washers)									
*Mounting Plate Fasteners - 20 of 3/8" carriage bolts for posts up to 5.5" thick OR Purchase separately 20 of 3/8" lag bolts (minimum of 4" long)									
**One 24" Cane Bolt (5000-242 or 5000-24SP) is required for central stability. Two are needed if you require a means of keeping the gates open.									

SNUG COTTAGE HARDWARE




Download includes this materials list, component cutting and layout sheet, tips on installing gate posts, and detailed instructions.
For a complete listing of our free gate plans and gate layouts visit snugcottagehardware.com.

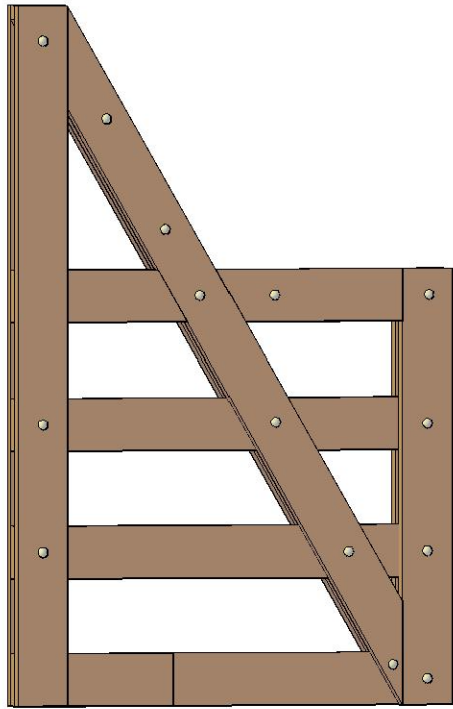




FLAT FRONTAL VIEW

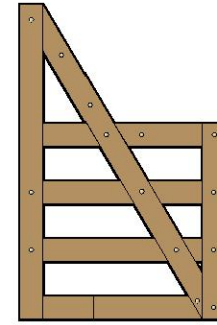


THREE LAYERS

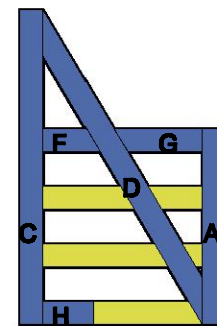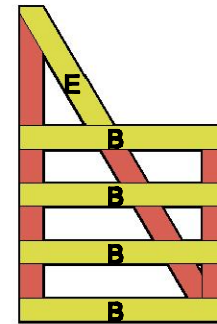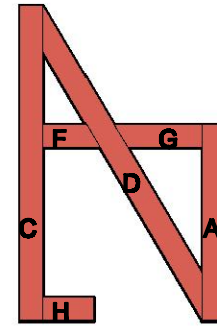


COMPONENTS (FULL 1" THICK x 5-1/2" WIDE)

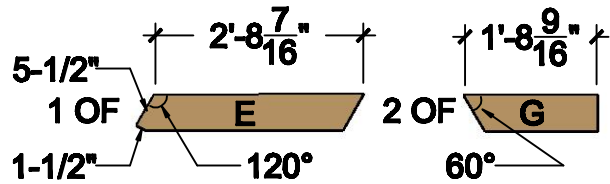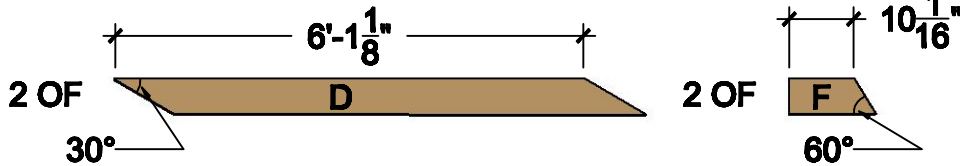




Snug Cottage Hardware
4' Cape Cod Board Gate

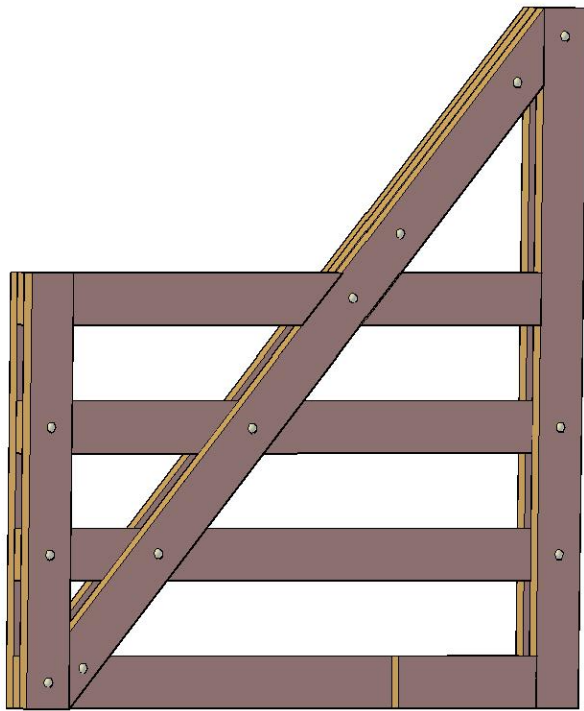







FLAT FRONTAL VIEW

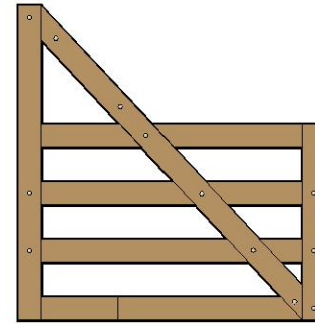

THREE LAYERS

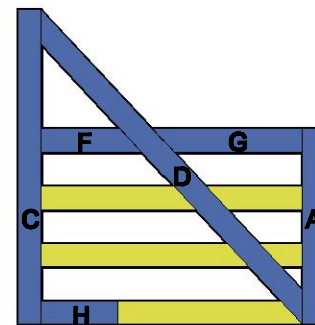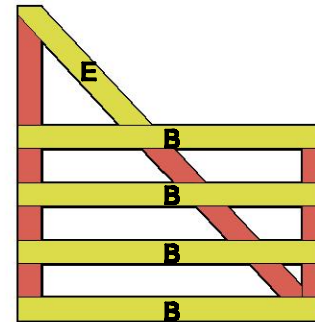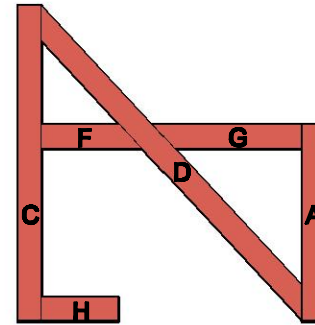

COMPONENTS (FULL 1" THICK x 5-1/2" WIDE)

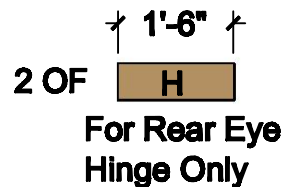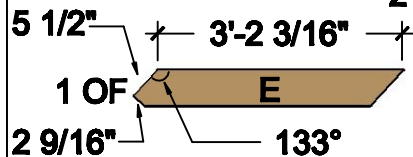

Snug Cottage Hardware
6' Cape Cod Board Gate